


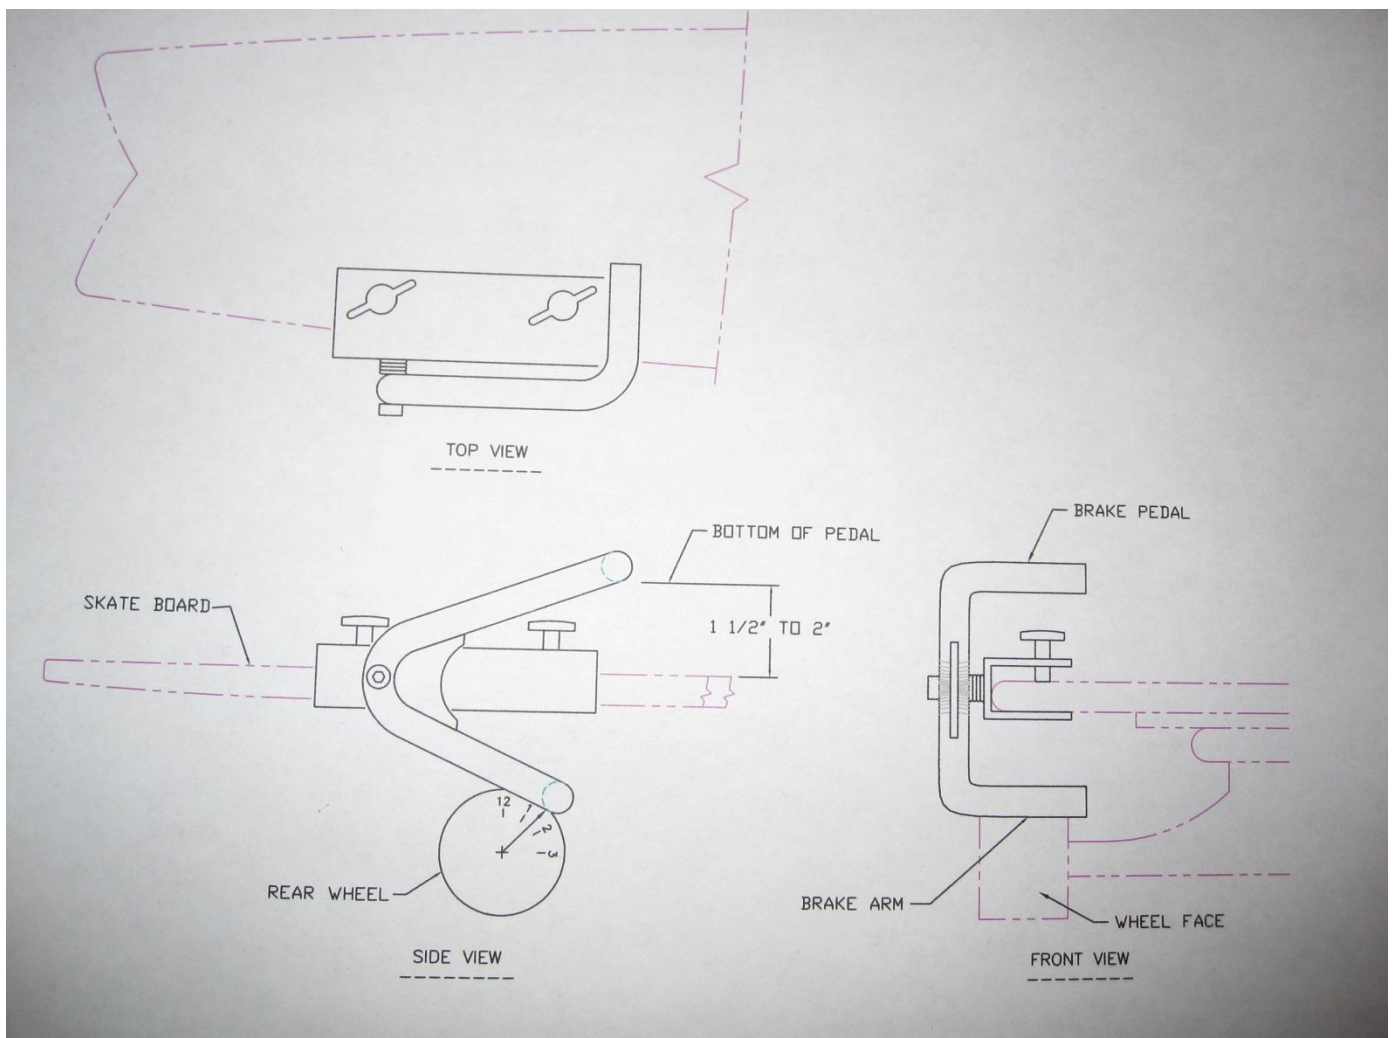

## V-Brake Installation Instructions

Slide the **V-Brake** onto your board near the back wheel and tighten the screws just enough so it will set vertical to the board. Push down on the pedal so you have a gap between the board and the pedal (about 2 fingers) as shown in the side view. Move the V-Brake back so the brake arm is against your wheel and position the mount so the brake arm is touching along the face of the wheel. The mount may not be in line with the side of the board (see the top view) but that's okay. The brake arm needs to make contact with the wheel at between 1 and 2 o'clock as shown in the side view. You may need to adjust the gap to accomplish the proper contact point. **DO NOT GO ABOVE 1 O-CLOCK**, this may fail the brake and you. The **fiber pad** should be used with hard wheels; it may mark up your softer wheels with too much friction. The last step is to clamp down the V-Brake mount and skate safe. The **spacer pad** is if your board is too thin for the mount to fit tight.



**Skate Safe Products**

[www.SkateSafeProducts.com](http://www.SkateSafeProducts.com)